


INSTALLATION INSTRUCTIONS ÂNCORA SCONCE - HARD-WIRED

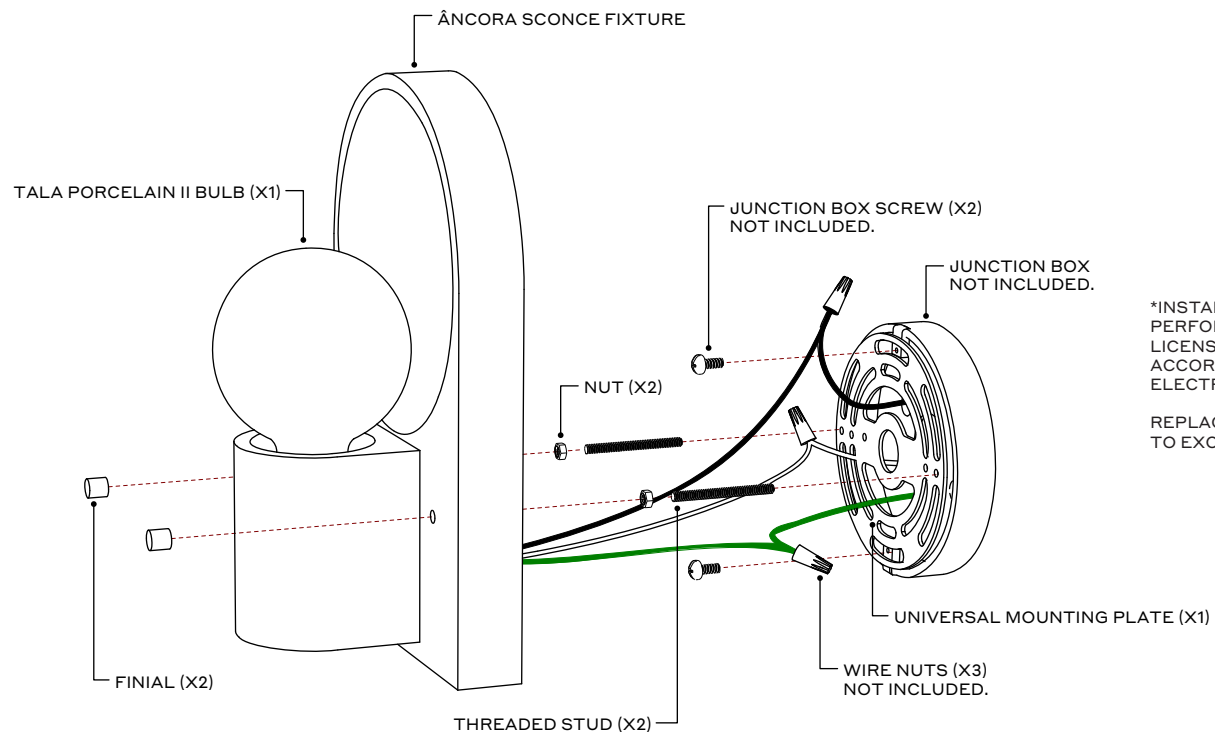


INSTALLATION TO BE PERFORMED BY A QUALIFIED LICENSED PROFESSIONAL IN ACCORDANCE WITH LOCAL ELECTRIC CODES

REPLACEMENT BULB NOT TO EXCEED 7 WATTS


WEAR GLOVES
DURING INSTALL

INSTALLATION INSTRUCTIONS ÂNCORA SCONCE - HARD-WIRED WITH SWITCH

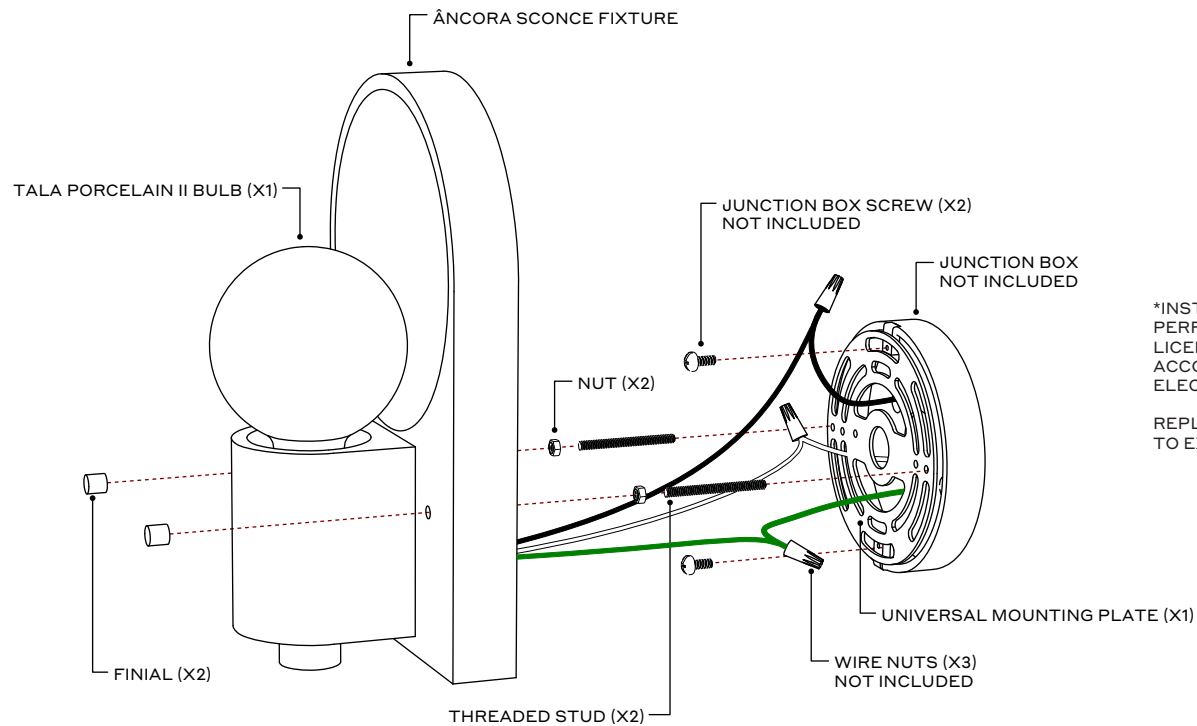


INSTALLATION TO BE PERFORMED BY A QUALIFIED LICENSED PROFESSIONAL IN ACCORDANCE WITH LOCAL ELECTRIC CODES

REPLACEMENT BULB NOT TO EXCEED 7 WATTS



WEAR GLOVES
DURING INSTALL

INSTALLATION INSTRUCTIONS ÂNCORA SCONCE - PLUG-IN WITH SWITCH

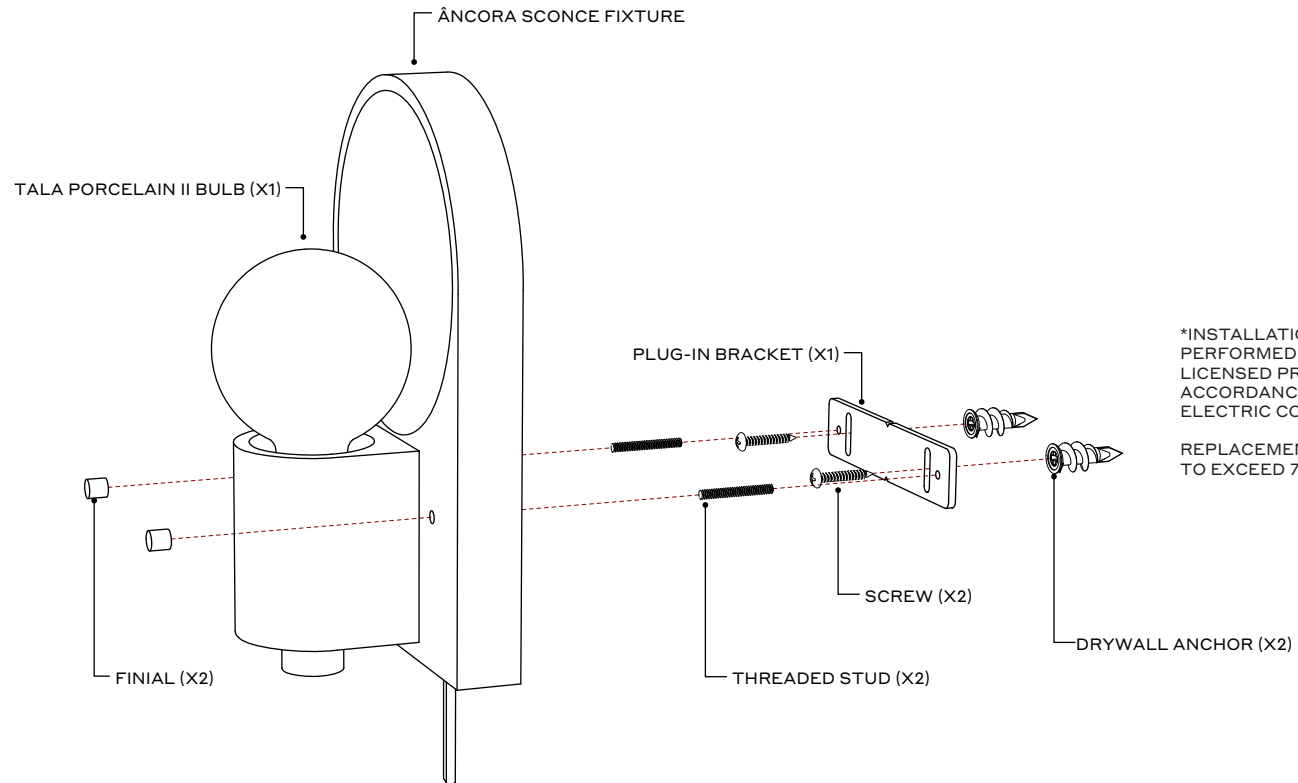

INSTALLATION TO BE PERFORMED BY A QUALIFIED LICENSED PROFESSIONAL IN ACCORDANCE WITH LOCAL ELECTRIC CODES

REPLACEMENT BULB NOT TO EXCEED 7 WATTS


WEAR GLOVES
DURING INSTALL